Miele

Operating and installation instructions

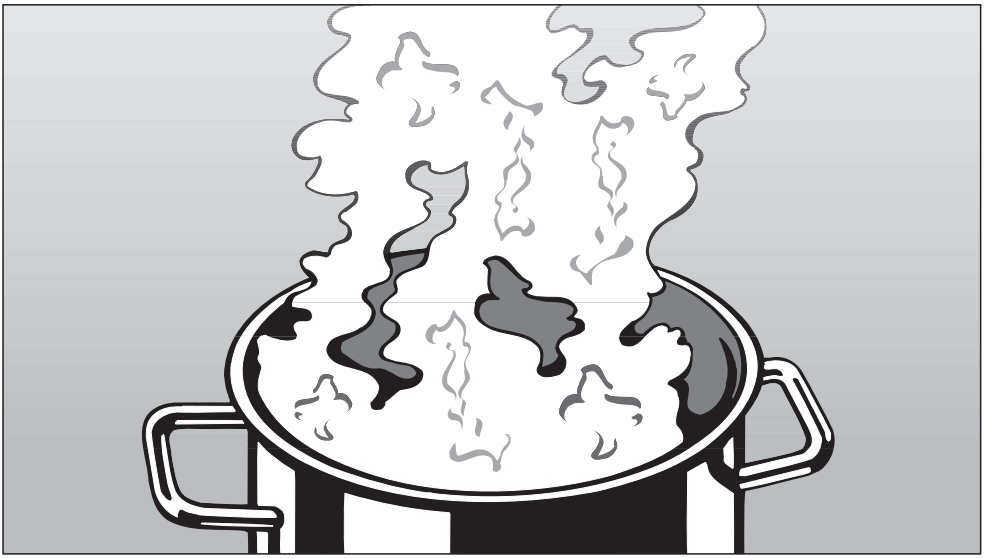

Cooker hood
DA 5690 W,
DA 5690 W EXT

To avoid the risk of accidents or damage to this appliance, it is **essential** to read these instructions before it is installed and used for the first time.

en - GB

M.-Nr. 09 204 070

Contents

Caring for the environment . . . 3
Warning and Safety instructions . . . 4
Guide to the appliance . . . 10
Modes of operation . . . 12
Miele@home . . . 13
Con@ctivity . . . 13
Operation . . . 14
To switch the fan on ⏻ . . . 14
To select a power level . . . 14
Run-on option "5 15" . . . 15
To switch the fan off ⏻ . . . 15
Hob lighting . . . 15
Operating hours counter . . . 16
Sensor tones . . . 18
Cleaning and care . . . 19
Housing . . . 19
Grease filters . . . 20
Resetting the Grease filter operating hours counter . . . 21
Fitting and replacing the charcoal filter . . . 22
Resetting the Charcoal filter operating hours counter . . . 22
Changing a halogen lamp . . . 23
After Sales Service . . . 24
Appliance dimensions . . . 25
Safety distance (S) . . . 25
Installation . . . 26
Assembly parts . . . 26
Installation instructions . . . 28
Dismantling . . . 28
Connection for air extraction . . . 29
Condensate trap . . . 30
Silencer . . . 31
Electrical connection . . . 32
Operation with Control module DSM 400 . . . 33
Potential free connection . . . 33
Connection to a light switch . . . 33
Technical data . . . 34

Disposal of the packing material

The transport and protective packing has been selected from materials which are environmentally friendly for disposal, and should be recycled.

Packaging e.g. cling film, polystyrene and plastic wrappings must be kept out of the reach of babies and young children. Danger of suffocation!

Disposal of your old appliance

Electrical and electronic appliances often contain materials which, if handled or disposed of incorrectly, could be potentially hazardous to human health and to the environment. They are, however, essential for the correct functioning of your appliance. Please do not therefore dispose of it with your household waste.

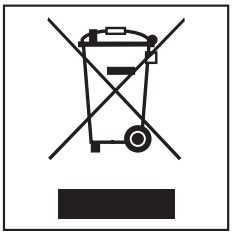

Please dispose of it at your local community waste collection / recycling centre or contact your dealer for advice. Ensure that it presents no danger to children while being stored for disposal.

This appliance complies with all relevant local and national safety requirements. Inappropriate use can, however, lead to personal injury and damage to property.

To avoid the risk of accidents and damage to the appliance, please read these instructions carefully before using it for the first time. They contain important information on safety, installation, use and maintenance.

Keep these instructions in a safe place and ensure that all users are familiar with the contents. Pass them on to any future owner of the appliance.

Correct application

▶ This appliance is intended for use in domestic households and in similar working and residential environments such as:

– Shops

– Offices and showrooms

and by residents in establishments such as:

– Hostels and guest houses.

▶ It must only be used as a domestic appliance to extract vapours and remove odours from cooking.

▶ The cooker hood is not intended for outdoor use.

Any other usage is not supported by the manufacturer and could be dangerous. Miele cannot be held liable for damage resulting from incorrect or improper use or operation.

▶ This appliance is not intended for use by people with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they are supervised whilst using it or have been shown how to use it correctly by a person responsible for their safety.

Safety with children

▶ This appliance is only intended for use by adults who have read these instructions.

▶ This appliance is not a toy! To prevent the risk of injury do not let children play with the appliance or its controls.

▶ Children under 8 years of age must be kept away from the cooker hood unless they are constantly supervised.

▶ Children 8 years and older may use the cooker hood only if they have been shown how to use it in a safe way and understand the hazards involved.

▶ Please be aware that on cooker hoods with halogen lighting, the lamps will get very hot during use and remain hot for some time after switching off. To safeguard against burning, keep children well away from the lamps at all times.

Technical safety

▶ Before installation, check the cooker hood for visible signs of damage. Do not install and use a damaged appliance. It could be dangerous.

▶ Before connecting the appliance to the mains supply, make sure that the voltage and frequency details given on the data plate correspond with the household electricity supply, otherwise the appliance could be damaged. Consult a qualified electrician if in any doubt.

▶ The electrical safety of this appliance can only be guaranteed if it is correctly earthed. It is most important that this basic safety requirement is observed and regularly tested and where there is any doubt, the household wiring system should be inspected by a qualified electrician. The manufacturer cannot be held liable for the consequences of an inadequate earthing system (e.g. electric shock).

▶ For safety reasons, this appliance may only be used when it has been fully installed.

▶ Only open the housing as described in the instructions given in the installation sheet and in the Cleaning and care section of this booklet. Under no circumstances should any other parts of the housing be opened. Tampering with electrical connections or components and mechanical parts is highly dangerous to the user, and can cause operational faults.

▶ Installation, maintenance and repairs may only be carried out by a service technician authorised by the manufacturer in strict accordance with current national and local safety regulations.
Repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorised work.

▶ Faulty components must only be replaced by genuine Miele original parts. The manufacturer can only guarantee the safety of the appliance when Miele replacement parts are used.

▶ During installation, maintenance and repair work, the appliance must be disconnected from the mains electricity supply.

▶ Do not connect the appliance to the mains electricity supply by a multi-socket adapter or an extension lead. These do not guarantee the required safety of the appliance (e.g. danger of overheating).

▶ For appliances with an external fan motor (...EXT models) the connection of the two units must be made using the connection cable and the plug connectors.
These models may only be combined with a Miele external motor.

▶ This appliance must not be used in a non-stationary location (e.g. on a ship).

▶ In areas which may be subject to infestation by cockroaches or other vermin, pay particular attention to keeping the appliance and its surroundings in a clean condition at all times. Any damage which may be caused by cockroaches or other vermin will not be covered by the guarantee.

Using at the same time as other heating appliances that depend on the air from the room

Warning - danger of toxic fumes

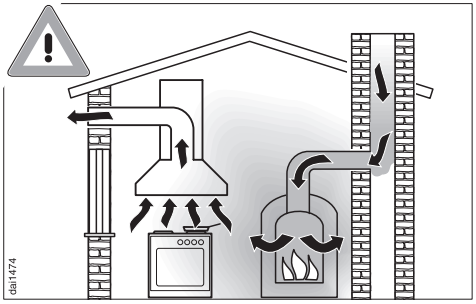

▶ Great care should be taken when using the cooker hood at the same time and in the same room or area of the house as another heating appliance which depends on the air in the room. Such appliances include gas, oil, wood or coal-fired boilers and heaters, continuous flow or other water heaters, gas hobs, cookers or ovens which draw air in from the room and duct exhaust gases out through a chimney or extraction ducting.
When used in extraction mode, with or without an external motor fitted, the appliance draws air in from the room in which it is installed **and** from neighbouring rooms.
If there is insufficient air, an underpressure will occur. The heating appliance may be starved of oxygen, impairing combustion.

Harmful gases could be drawn out of the chimney or extraction ducting back into the room, with potentially fatal consequences.

In order to ensure safe operation, and to prevent gases given off by the heating appliances from being drawn back into the room when the cooker hood and the heating appliance are in operation simultaneously, an underpressure in the room of 0.04 mbar (4 pa) is the maximum permissible.

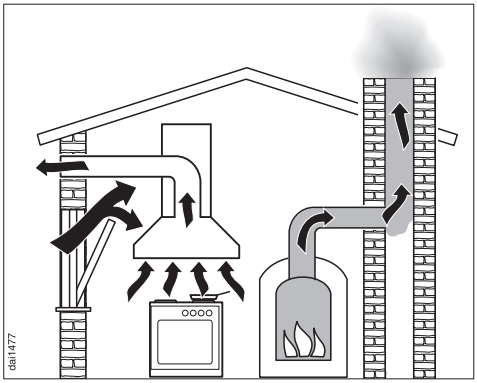

Ventilation can be maintained by air inlets which cannot be blocked, in windows, doors and outside wall vents, or by other technical measures, such as ensuring that the cooker hood can only be switched on when the heating appliance is switched off or vice versa. A ventilation brick alone is not generally sufficient to ensure safe ventilation.

⚠ The overall ventilation condition of the dwelling must be taken into account. If in any doubt, the advice of a competent builder or, for gas, a qualified gas fitter (GasSafe registered in the UK) or electrician must be sought.

If the hood is being operated in recirculation mode, the above restrictions do not apply.

Correct use

▶ Never use an open flame beneath the cooker hood. To avoid the danger of fire, do not flambé or grill over an open flame.
When switched on, the cooker hood could draw flames into the filter. Fat particles drawn into the cooker hood present a fire hazard.

▶ When using the cooker hood over a gas hob, ensure that any burners in use are always covered by a pan. Switch the cooking zone off when a pan is removed, even for a short time.
Regulate the flame so that it does not burn up the sides of the pan.
Do not allow the pans to overheat excessively (e.g. when using a wok). The cooker hood can become damaged when exposed to excessive heat.

▶ Always switch the cooker hood on when using the hob, otherwise condensation may collect in the hood, which could cause corrosion.

▶ When cooking with oil or fat, chip pans and deep fat fryers etc, do not leave the pans unattended. Never leave an open grill unattended when grilling. Overheated oil and fat can ignite and could set the cooker hood on fire.

▶ Do not use the cooker hood without the filters in place. This way you will avoid the risk of grease and dirt getting into the appliance and hindering its smooth operation.

▶ The filters should be regularly cleaned or changed as appropriate. Saturated filters are a fire hazard. See "Cleaning and care".

▶ The cooker hood can get very hot during cooking due to heat rising from the hob.
Do not touch the housing or the grease filters until the cooker hood has cooled down.

▶ Do not use a steam-cleaner to clean this appliance. Steam could reach the electrical components and cause a short circuit.

Correct installation

▶ Refer to the cooker or hob manufacturer's instructions as to whether a cooker hood may be operated above the cooker/hob.

▶ The minimum safety distances between the top of the cooker or hob and the bottom of the cooker hood given in the "Appliance dimensions" section of this booklet must be maintained, unless the hob manufacturer states that a greater safety distance is required.

If more than one cooking appliance is fitted beneath the cooker hood, and they have different minimum safety distances to the cooker hood, select the greater distance.

▶ Safety regulations prohibit the fitting of a cooker hood over solid fuel stoves.

▶ All ducting, pipework and fittings must be of non-flammable material. These can be obtained from the Miele Spare Parts department or from builders' merchants.

▶ The appliance must not be connected to a chimney or vent flue which is in use. Neither should it be connected to ducting which ventilates rooms with fireplaces.

▶ If exhaust air is to be extracted into a chimney or ventilation duct no longer used for other purposes, seek professional advice.

Accessories

▶ Only use genuine Miele original spare parts and accessories with this appliance. Using spare parts or accessories from other manufacturers will invalidate the guarantee, and Miele cannot accept liability.

The manufacturer cannot be held liable for damage caused by non-compliance with these Warning and Safety instructions.

Guide to the appliance

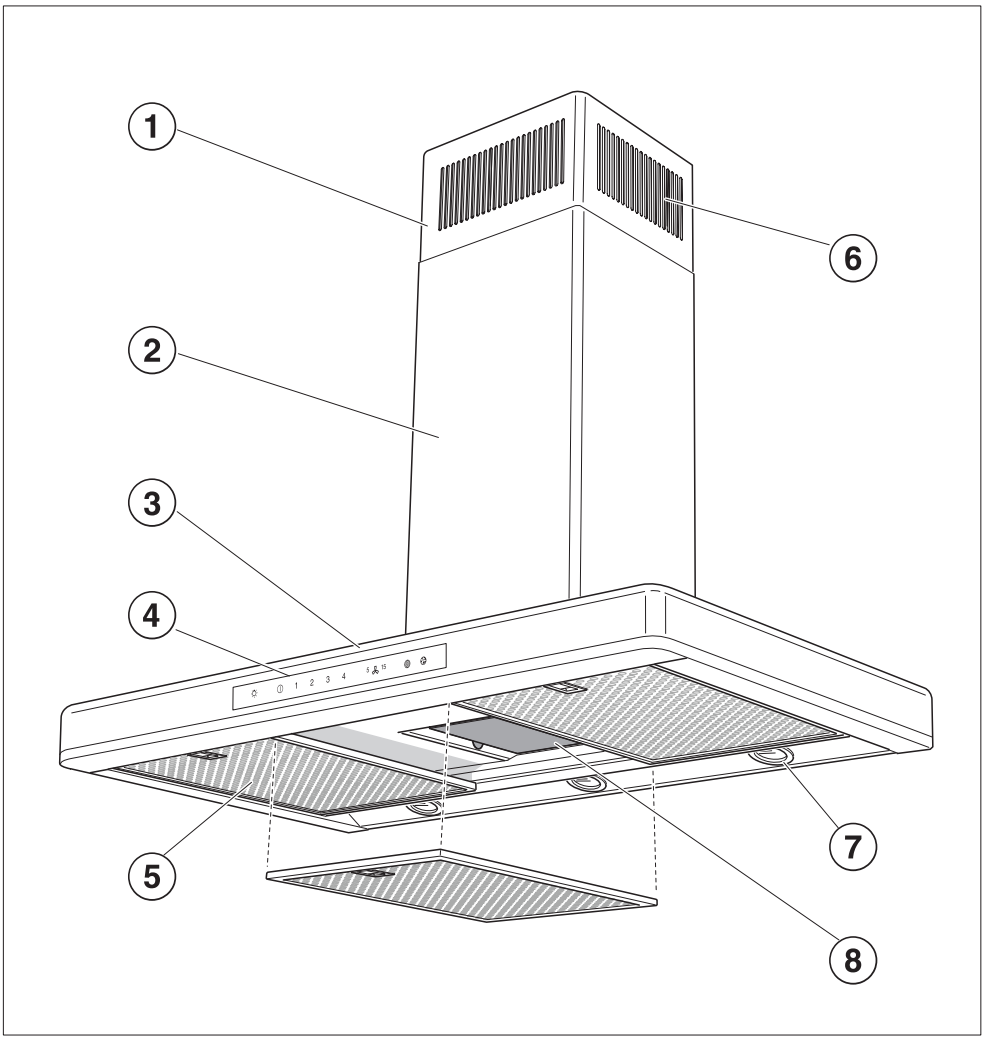

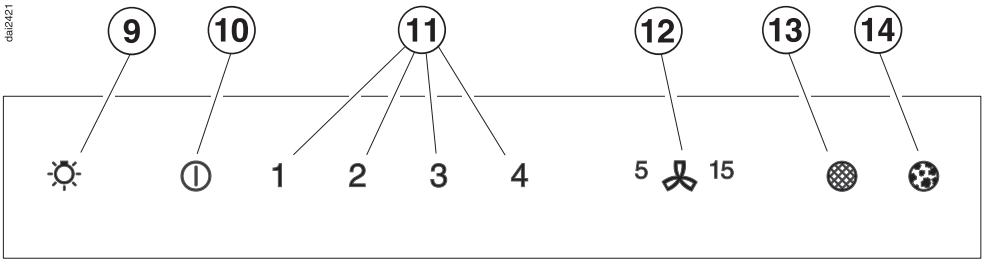

① **Telescopic extension piece**

② **Tower**

③ **Canopy**

④ **Sensor controls**

The symbols act as sensors. To select a function, touch the relevant sensor. An audible tone sounds briefly to confirm selection.

⑤ **Grease filters**

⑥ **Recirculation grille**

(only for recirculation mode)

⑦ **Hob lighting**

⑧ **Charcoal filter**

(special accessory for recirculation mode)

⑨ **Sensor for hob lighting**

This sensor can be used to switch the hob lighting on and off and is also a dimmer switch.

⑩ **Sensor for switching the fan on and off**

⑪ **Sensors to select the fan power level**

⑫ **Sensor for the run-on option**

This sensor activates the run-on option. The fan can be set to switch off automatically after either 5 or 15 minutes.

⑬ **Sensor for the grease filters**

The sensor lights up when the grease filters need to be cleaned.

It is used to reset the operating hours counter every time the grease filters are cleaned (see "Cleaning and care").

It can also be used to check and alter the operating hours counter.

⑭ **Sensor for the charcoal filter**

The sensor for the charcoal filter lights up when the charcoal filter used in recirculation mode needs to be replaced. For this to happen, the operating hours counter needs to be activated before the appliance is used for the first time.

The sensor is used to reset the operating hours counter every time the charcoal filter is replaced (see "Cleaning and care").

It can also be used to check and alter the operating hours counter.

For information about using the appliance, see "Operation".

Modes of operation

The cooker hood works with

. . . air extraction:

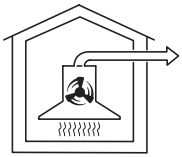

The air is drawn in and cleaned by the grease filters and directed outside.

If the on-site ventilation system does not have a **non-return flap**, the non-return flap supplied with the appliance must be fitted in the exhaust socket in the motor unit.

Having a non-return flap fitted in the ducting ensures that air, once ducted to the outside, cannot get back into the room again.

The flap is closed when the cooker hood is switched off.

When the cooker hood is switched on, the non-return flap opens for the cooking vapours to be blown directly outside.

. . . air recirculation:

(this requires an optional conversion kit and charcoal filter: see "Technical Data")

The air is drawn in and cleaned first by the grease filters and then by a **charcoal filter**. The cleaned air is then recirculated back into the kitchen through grilles in the top of the cooker hood telescopic extension piece.

Before using the cooker hood in recirculation mode, ensure that the charcoal filter is in place. See "Cleaning and care".

. . . an external motor:

(...EXT models only)

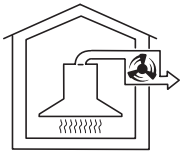

The ...EXT models are designed to be connected to an external motor located outside the room.

The external motor is connected to the cooker hood by means of a control cable, and is operated by the controls on the cooker hood.

Con@ctivity

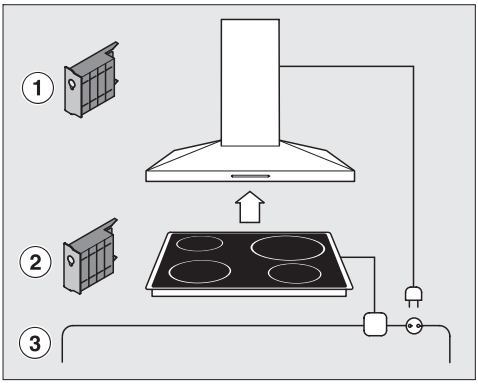

This cooker hood is communication enabled.

Communication module XKM 2000 DA ①, available as an optional extra, enables the operation of the cooker hood to be automatically controlled by the operating status of a Miele electric hob with onset controls.

For communication to take place, the hob must be fitted with the appropriate communication module ②.

The hob transmits information about its operating status to the cooker hood via the household power supply (Powerline) ③.

– When the hob is switched on the cooker hood hob lighting also comes on and then after a short time the fan switches on.

– During cooking the cooker hood automatically sets its power level according to the number of cooking zones in operation and their power levels.

– After switching the hob off the fan and the hob lighting will switch off automatically after a period of time.

For detailed information about this function please read the separate instruction booklet supplied with the XKM 2000 DA communication module.

The communication module is fitted to the cooker hood in the area of the motor and is connected to the controls of the cooker hood.

This module must be installed by a Miele service technician or suitably qualified electrician.

To switch the fan on ⏻

■ Touch the ⏻ sensor.

The fan will come on at power level **2**. The ⏻ and **2** sensors will light up.

To select a power level

Depending on the intensity of the cooking vapours, levels **1** to **3** are usually sufficient for normal cooking.

■ Select the level you require by touching the **1, 2** or **3** sensors.

Intensive setting

■ For short periods of cooking food with intensive vapours and a strong aroma, e.g. when searing meat, you may wish to select level **4**, the Intensive setting.

Automatic switch-off of the Intensive setting

You can set the Intensive setting so that it always only runs for 10 minutes before reverting automatically to level **3**.

■ To set this option, both the fan and the hob lighting must be switched off.

■ Touch the Run-on option sensor for approx. 10 seconds until the **1** sensor lights up.

■ Touch in turn

– the ☼ sensor,

– the **1** sensor, and

– the ☼ sensor again.

If Automatic switch-off is not activated, the **1** and **4** sensors will flash.

■ Touch the **4** sensor to activate Automatic switch-off.
The **1** and **4** sensors will now light up constantly.
Touch the **1** sensor to deactivate the Automatic switch-off function.

■ Confirm your selection by touching the sensor.

– If you do not confirm within 4 minutes, the cooker hood will automatically revert to the original setting.

Run-on option "5 15"

It is advisable to leave the fan running for a few minutes after cooking has finished to neutralise any lingering odours in the air.

The fan can be set to switch off automatically after either 5 or 15 minutes.

- After cooking has finished, touch the Run-on option sensor whilst the fan is still running

– Touch once = The fan will switch off after 5 minutes (**5** will light up).

– Touch twice = The fan will switch off after 15 minutes (**15** will light up).

To switch off the run-on option, touch the run-on option sensor again. The appliance will then not switch off automatically.

To switch the fan off ⏻

- Touch the ⏻ sensor to switch the fan off.

Hob lighting

The hob lighting can be switched on and off independently of the fan.

To switch the hob lighting on

- Touch the sensor briefly.

The lighting will switch on at maximum brightness.

To dim the hob lighting

The brightness of the hob lighting can be adjusted.

- With the lighting switched on, touch and hold the sensor.
  The brightness will gradually dim until you release the sensor.
- To increase the brightness, touch the sensor again to the level required, then release it.

If you keep your finger on the sensor, the light will continually change between bright and dim.

To switch the hob lighting off

- Touch the sensor briefly.

Safety switch-off

Should the cooker hood be left on, the fan will switch off automatically after 10 hours. The lighting will remain on.

- Touching the ⏻ sensor will switch the fan back on again.

Operating hours counter

The number of hours the appliance has been in operation is stored in memory.

The operating hours counters tell you when the grease filters or charcoal filter need to be cleaned or replaced.

Checking the grease filter operating hours counter

After 30 hours of operation (or another time if the operating hours counter has been altered), the sensor will light up.

The grease filters must then be cleaned and the operating hours counter reset (see "Cleaning and Care").

To check the percentage of time set already used:

- Touch the ⏻ sensor to switch the fan on.
- Touch and hold the sensor.

One or more of the **1** to **4** sensors will flash.

The number of flashing sensors indicates the percentage of the operating time which has already been used up.

Sensor **1** = 25 %
Sensors **1** and **2** = 50 %
Sensors **1** to **3** = 75 %
Sensors **1** to **4** = 100 %

The number of operating hours used remains in the memory, even when the appliance is switched off or there is a power cut.

Altering the grease filter operating hours counter

You can set the operating hours counter to suit the type of cooking you do.

The operating hours counter is set at the factory for 30 hours.

Select a shorter time of 20 hours if you fry a lot.

If you only cook occasionally, we still recommend 20 hours because grease which has built up gradually over a long period of time will harden on the grease filters and make cleaning more difficult.

If you use very little fat for cooking, select a longer time of 40 or 50 hours.

To alter the operating time:

- Touch the ⏻ sensor to switch the fan off.
- Touch the and sensors at the same time.

The grease filter sensor and one of the fan power level sensors **1** to **4** will flash.

Sensors **1** to **4** indicate the time set:
Sensor **1** = 20 hours
Sensor **2** = 30 hours
Sensor **3** = 40 hours
Sensor **4** = 50 hours

- Touch the **1** sensor to select a shorter time and the **4** sensor to select a longer time, until the time required has been set.

- Confirm your selection by touching the ⊛ sensor.

All the lamps will go out.

If you do not confirm within 4 minutes, the cooker hood will automatically revert to the original setting.

Activating and altering the charcoal filter operating hours counter

(in recirculation mode)

The charcoal filter is needed for recirculation mode.

On delivery, the operating hours counter for the charcoal filter is **deactivated**.

For recirculation mode, the operating hours counter needs to be set to suit the type of cooking you do:

- Touch the ⏻ sensor to switch the fan off.
- Touch the 🌀 and ❂ sensors at the same time.

The charcoal filter sensor ❂ and one of the fan power level sensors **1** to **4** will flash.

Sensors **1** to **4** indicate the time set:
Sensor **1** = 120 hours
Sensor **2** = 180 hours
Sensor **3** = 240 hours
Sensor **4** = Deactivated

- Select the level you require by touching the 1, 2 or 4 sensor.
- Confirm the selection by pressing the charcoal filter sensor ❂.

All the lamps will go out.

If you do not confirm within 4 minutes, the cooker hood will automatically revert to the original setting.

The charcoal filter touch sensor ❂ will light up after the cooker hood has operated for the number of hours set.

- The charcoal filter must then be replaced with a new one (see "Cleaning and care").
- Afterwards, the operating hours counter will need to be reset (see "Cleaning and care").

Checking the charcoal filter operating hours counter

To check the percentage of time set already used:

- Touch the ⏻ sensor to switch the fan on.
- Touch and hold the ❂ sensor.

One or more of the **1** to **4** sensors will flash.

The number of flashing sensors indicates the percentage of the operating time which has already been used up.

Sensor **1** = 25 %
Sensors **1** and **2** = 50 %
Sensors **1** to **3** = 75 %
Sensors **1** to **4** = 100 %

The number of operating hours used remains in the memory, even when the appliance is switched off or there is a power cut.

Sensor tones

When selecting a function with the sensors, an audible tone will sound briefly to confirm.

The audible tone can be deactivated.

- Touch the ⏻ sensor to switch the fan off.
- Touch the **4** sensor and the grease filter sensor ▩ at the same time for approx. 5 seconds until a tone sounds briefly. The audible tone is now switched off for all functions.
- To reactivate the audible tone, repeat the above process.

After the cooker hood has been disconnected from the mains electricity supply or after a power cut, the audible tone is activated regardless of the last setting.

A range of Miele branded cleaning and conditioning products is available to order from Miele (see back page for details) or the via the internet at www.miele-shop.com.

⚠ Before any cleaning or maintenance work is carried out, disconnect the cooker hood from the mains supply.

⚠ Halogen lamps get very hot during use and remain hot for some time after being switched off. The hot lamps are also susceptible to damage from damp cleaning. Wait a few minutes after switching off before commencing cleaning.

Housing

General

The surfaces and controls are susceptible to scratches and abrasions. Please observe the following cleaning instructions.

- All external surfaces and controls can be cleaned using a Miele E-Cloth or with warm water and a little washing-up liquid applied with a well wrung-out soft sponge or cloth.
- Wipe the surfaces dry using a soft cloth.

Do not use:

– cleaning agents containing soda, acids, chlorides or solvents,

– abrasive cleaning agents, e.g. powder cleaners or cream cleaners and abrasive sponges, as well as pot scourers or sponges which have been used previously with abrasive cleaning agents.
These will damage the surface material.

Important for appliances with stainless steel surfaces

Stainless steel surfaces can be cleaned using the Miele E-Cloth or with a suitable, non-abrasive, proprietary cleaning agent for stainless steel, following the manufacturer's instructions on the packaging.

To help prevent re-soiling, a conditioning agent for stainless steel can also be used. Follow the manufacturer's instructions on the packaging.

Important for appliances with lacquered surfaces

It is very difficult to clean this type of surface without causing minor marks to the surface material.
This can become particularly noticeable with darker colours and if there is halogen lighting in the kitchen.

Important for appliances with glass surfaces

- Glass surfaces can be cleaned using a proprietary non-abrasive cleaning agent designed specifically for use on glass.

Do not use:

– abrasive cleaning agents, e.g. powder cleaners and cream cleaners,

– abrasive sponges, e.g. pot scourers or sponges which have been previously used with abrasive cleaning agents,

– oven sprays.

Grease filters

The re-usable metal grease filters in the appliance remove solid particles (grease, dust, etc.) from the kitchen vapours, preventing soiling of the cooker hood.

The grease filters should be cleaned regularly (at least every 3-4 weeks) to avoid a build-up of grease, but always clean immediately if the ⊛ sensor lights up.

⚠ An oversaturated filter is a fire hazard.

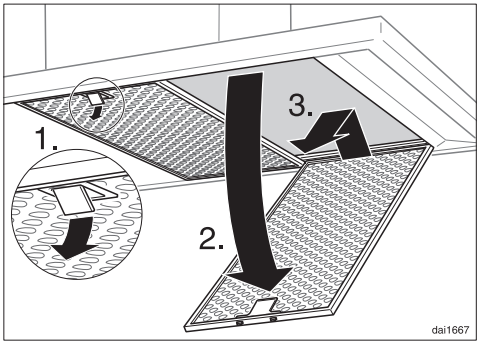

- To take out the grease filters, release the locking clip on the filters, lower the filters 45°, unhook them at the back and remove them.

To avoid damaging the filters or the hob below, make sure you hold the filters securely at all times when handling them.

Cleaning the grease filters by hand

- Clean the filters with a soft nylon brush in a mild solution of hot water and a little washing-up liquid.
  Do not use "neat" washing up liquid.

Do not use:

– cleaning agents containing descaling agents,

– powder cleaners, cream cleaners or abrasive all-purpose cleaners.

– oven sprays.

Cleaning the grease filters in the dishwasher

- Place the filters as upright as possible in the lower basket, with the short sides upright. Make sure that the spray arm can move freely.
- Do not wash at more than 65° C. If a Miele dishwasher is being used, select the Sensor wash programme.
- Use a mild dishwasher detergent.

Depending on the cleaning agent used, cleaning the filters in a dishwasher can cause permanent discolouration to the surface. However, this will not affect the functioning of the filters in any way.

- After cleaning, leave the filters to dry on an absorbent surface before replacing them.
- When removing the filters for cleaning, also clean off any residues of oil or fat from the now accessible housing to prevent the risk of these catching fire.

When putting the grease filters back in position, ensure that the locking clips are facing down towards the hob.

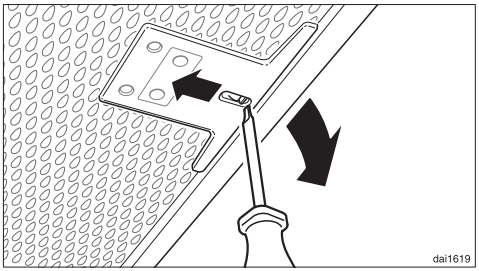

- If a grease filter is inadvertently replaced upside down, insert a small screwdriver blade into the slit to disengage the clip.

Resetting the Grease filter operating hours counter

After cleaning, the operating hours counter needs to be reset.

- Whilst the fan is switched on, press the Operating hours control for approx. 3 seconds until only the **1** is flashing.
  The Grease filter symbol goes out.

If you want to clean the grease filters **before** the operating hours counter has reached its maximum,

- Press the Operating hours control for approx. 6 seconds until only the **1** is flashing.

Fitting and replacing the charcoal filter

If the cooker hood is connected for recirculation, a charcoal filter must be inserted in addition to the grease filters. This is designed to absorb cooking odours.
It is fitted in the canopy above the grease filters.

New charcoal filters can be purchased from your Miele dealer, from the Miele Spare Parts Department or via the internet at www.miele.shop.com.
See back cover for contact details, and "Technical data" for the model number of the filter.

- Before fitting or replacing a charcoal filter, the grease filters must first be taken out (see previous section for instructions on how to do this).
- Take the charcoal filter out of its packaging.

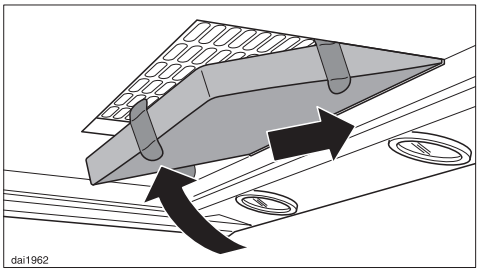

- Insert the charcoal filter into the back of the charcoal filter frame, then push up into the frame at the front.

When fitting for the first time:

- Activate the Operating hours counter (see "Operation").

Always replace the charcoal filter immediately if

– the ❁ lights up

or

– it is no longer effective in absorbing kitchen odours.

It should, however, be replaced at least every 6 months.

Used charcoal filters can be disposed of with the normal household waste.

Resetting the Charcoal filter operating hours counter

After changing the charcoal filter, the Operating hours counter needs to be reset.

- Whilst the fan is switched on, press the Operating hours control ⊛⊛ for approx. 3 seconds until only the **1** is flashing.
  The Charcoal filter symbol ⊛ goes out.

If you want to change the charcoal filter **before** the operating hours counter has reached its maximum,

- Press the Operating hours control ⊛⊛ for approx. 6 seconds until only the **1** is flashing.

Changing a halogen lamp

- Before any cleaning or maintenance work, disconnect the cooker hood from the mains supply.

⚠ Exercise caution when changing halogen lamps. They get very hot during use and remain hot for some time after being switched off. Let them cool down before you change them.

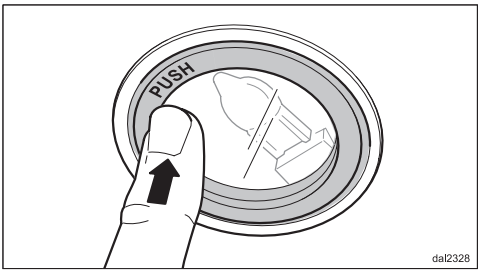

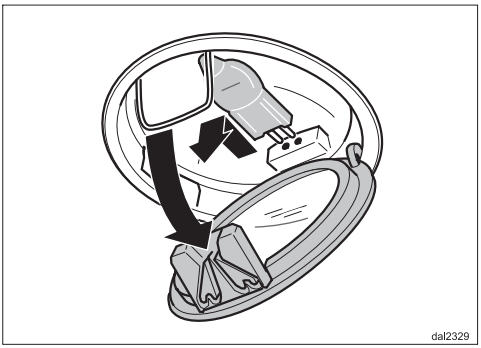

- To access the halogen lamp press and release the lamp cover.
- Pull the old halogen lamp out of the connection socket.
- Using a cloth or glove, push the new lamp (12 V, 20 W, G4 cap) carefully into the connection socket. Please follow the manufacturer's instructions.
- Push the cover back up and make sure it clicks into place.

After Sales Service

In the event of a fault which you cannot correct yourself, or if the appliance is under guarantee, please contact:

– Your Miele Dealer / Chartered Agent

or

– The Miele Service Department (see back cover for address).

When contacting your Dealer or Miele, please quote the model and serial number of your appliance. These are shown on the data plate which is visible when the grease filter is removed.

For G.B.: Please note that telephone calls may be monitored and recorded for training purposes.

N.B. A call-out charge will be applied for service visits where the problem could have been resolved as described in these instructions.

Guarantee

For information on the appliance guarantee specific to your country please contact Miele. See back cover for contact details.

In the U.K. your appliance is guaranteed for 2 years from the date of purchase. To activate your cover call 0845 365 6640 or register online at www.miele.co.uk

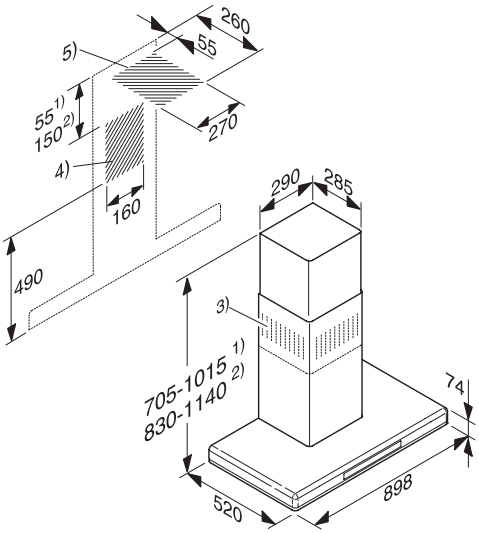

1) Extraction

2) Recirculation

3) Ventilation grille positioned at the top for recirculation

4) and 5):
(5 is not required for recirculation mode cooker hoods)
The shaded area represents the wall or ceiling area for the vent cut-out, for fitting the connection socket and on EXT models for feeding the connection cable through to the external motor.
For recirculation mode, only a connection socket needs to be fitted.

Connection for air extraction
∅ 150 mm, or ∅ 125 mm with reducing collar.

Safety distance (S)

When planning the installation height of your cooker hood, the **minimum** safety distance between the top of a cooker or hob and the bottom of the cooker hood are as follows, unless a greater distance is specified by the manufacturer of your cooking appliance:
450 mm (GB), 600 mm (AU, NZ) above electric hobs and cookers,
650 mm above an open grill or deep fat fryer,
650 mm above gas hobs and cookers.
If this cooker hood is installed above a Miele Wok CS 1028 CombiSet appliance, a minimum safety distance of 760 mm must be maintained between the burner and the lower edge of the cooker hood.
See "Warning and Safety" instructions for further information.

– When deciding on the safety distance, please note that 650 mm may be preferable above electric cookers/hobs to give more working space.

– Account should also be taken of the height of the person who will be using the hood most often. They should have sufficient space to work comfortably at the hob, and be able to reach the hood controls with ease.

– If positioned too high, extraction will be inefficient.

– The height of the cooking appliance below must be taken into account when planning the installation height of the cooker hood.

Installation

Assembly parts

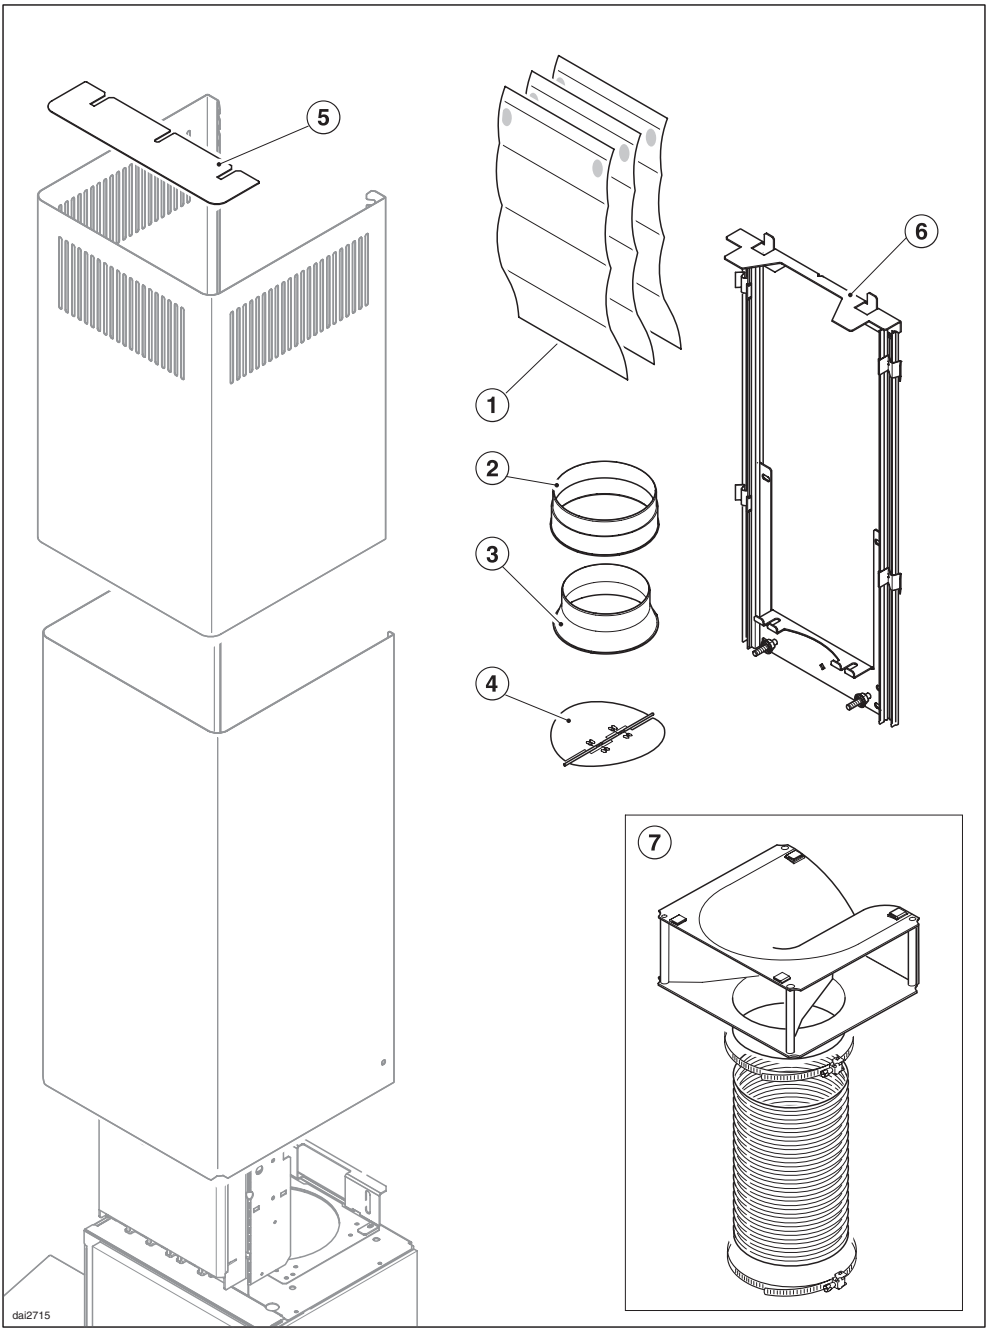

① **3 protective sheets**
for use when fitting the tower.

② **1 exhaust connection** for exhaust ducting ∅ 150 mm.

③ **1 reducing collar**
for ∅ 125 mm exhaust ducting.

④ **1 non-return valve**
for fitting into the exhaust connection on the motor unit (not for recirculation mode)

⑤ **1 cover plate**
for fitting to the deflector connection in recirculation mode

⑥ **Telescopic wall bracket** for securing the cooker hood to the wall.

⑦ **Conversion kit for recirculation mode**
including directional unit and flexible aluminium hose with clips (this is not included, but is available as an optional extra - see Technical Data).



6 screws 5 x 40 mm and
6 x S 8 plugs for securing the wall bracket.

⚠ The screws and plugs are designed for use in solid walls only. For other types of wall construction, alternative fixings will be required. Make sure that the wall is able to take the weight of the cooker hood.

2 x M 6 self-tapping nuts
for securing the appliance.

2 screws 3.9 x 7.5 mm
for securing the tower.



1 lever
for dismantling the tower.

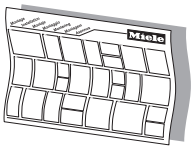

Installation instructions

Before installation, it is important to read the information given on the following pages as well as the "Appliance dimensions" and the "Warning and Safety instructions" at the beginning of this booklet.
This is particularly crucial when using the cooker hood at the same time as a heating appliance that relies on oxygen from the same room to avoid the danger of toxic fumes building up.

Installation instructions

See enclosed Installation sheet for instructions on how to install this appliance.

Dismantling

Should the appliance ever need to be dismantled, follow the installation instructions in reverse order as described on the installation sheet.

A lever is supplied to assist with the removal of the tower.

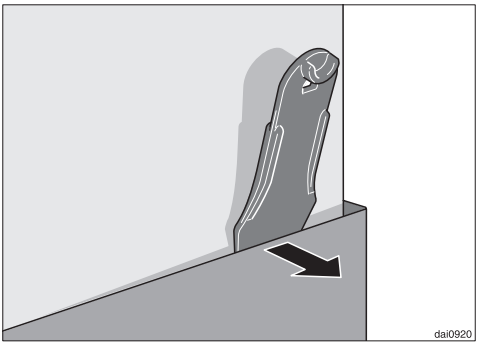

- After loosening the fixing screws on the tower, push the lever between the tower and the telescopic extension piece to lever the tower out of its fixings.

Important: To avoid the danger of toxic fumes, please observe the Warning and Safety instructions. This is especially crucial when using the cooker hood at the same time as another heating appliance which relies on air from the same room. The cooker hood should be installed according to local and national building regulations. Seek approval from the building inspector where necessary.

– Only use smooth pipes or flexible hoses made from non-flammable materials for the extraction ducting.
– When using an external motor, make sure that the exhaust ducting is sufficiently rigid. The external motor can cause an underpressure which can result in the exhaust ducting distorting.

To achieve the greatest possible air extraction with the lowest noise level, please note the following:

– To ensure efficient air extraction, the diameter of the exhaust ducting should not be less than 150 mm.
– If flat ducting is being used, the cross-sectional area must not be smaller than the cross-sectional area of the exhaust connection.
– All ducting, pipework and fittings must be of non-flammable materials.
– The exhaust ducting should be as short and straight as possible.
– Only use wide radius bends.
– The exhaust ducting should not be kinked or compressed.
– Ensure that all connections are strong and airtight.
– Where ducting is horizontal, it must be laid to slope away at at least 1 cm per metre. This is to ensure that condensate cannot drain back into the cooker hood.

– If the exhaust air is to be ducted into the open air, the installation of a telescopic wall vent or roof vent (available as an optional accessory) is recommended.

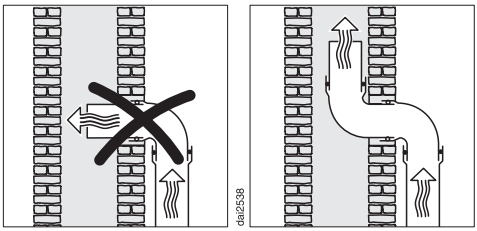

– If the exhaust air is to be ducted into a vent flue, the ducting must be directed in the flow direction of the flue.

Important:

If the exhaust ducting is to run through rooms, ceiling space etc. where there may be great variations in temperature between the different areas, the problem of condensation will need to be addressed. The exhaust ducting will need to be suitably insulated.

Condensate trap

(optional accessory)

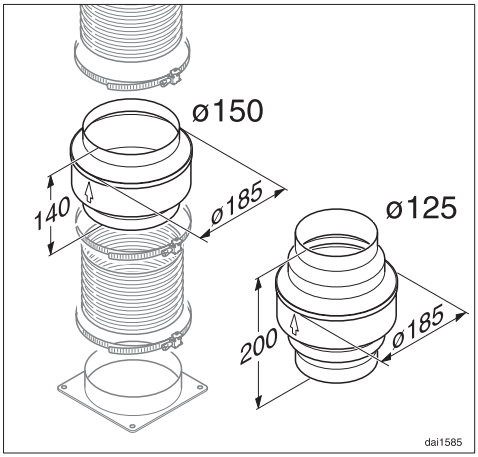

In addition to insulating the exhaust ducting, we recommend that a suitable condensate trap is also installed to collect and evaporate any condensate which may occur. Condensate traps are available for ∅ 125 mm or ∅ 150 mm ducting.

When installing a condensate trap, ensure that it is positioned vertically and if possible directly above the exhaust connection. The arrow on the housing indicates the direction of air-flow.

Cooker hoods designed for use with an external motor (...EXT models) have an integrated condensate trap.

Silencer

(optional accessory)

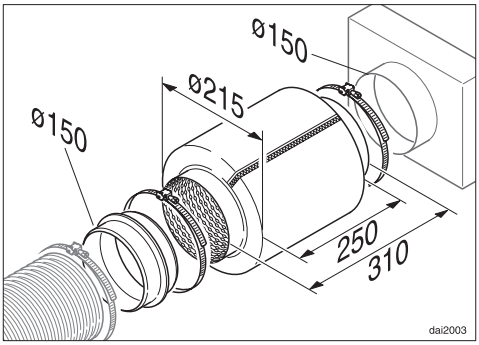

To achieve even further reductions in noise levels, a special silencer can be fitted in the ducting system.

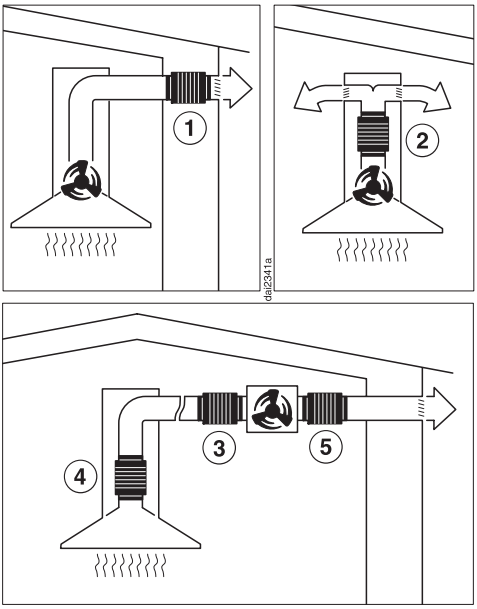

...with air extraction:

The silencer not only reduces noise from the motor outside the house, but also sounds from outside (e.g. traffic noise).
For this reason the silencer must be positioned as close as possible to the ducting exit ①.

...in recirculation mode:

The silencer needs to be positioned between the exhaust connection and the deflector ②. Ensure there is adequate space in the tower for fitting it.

...air extraction with external motor:

To minimise noise from the motor in the kitchen, the silencer should be positioned in front of the external motor ③ if possible, or if the ducting is long, above the exhaust connection on the cooker hood ④.

In the case of an external motor located inside the house, fitting a silencer behind the external motor ⑤ reduces the noise of the motor outside the house.

In all modes of operation, the most effective noise reductions are achieved if two silencers are fitted one behind the other in the system.

Electrical connection

All electrical work should be undertaken by a suitably qualified and competent person in strict accordance with current national and local safety regulations (BS 7671 in the UK).

Installation, repairs and other work by unqualified persons could be dangerous, for which the manufacturer cannot be held liable.

Ensure power is not supplied to the appliance until after installation or repair work has been carried out.

Do not connect the appliance to the mains electricity supply by an extension lead. These do not guarantee the required safety of the appliance.

The connection data is given on the data plate. This is visible when the grease filters have been removed. Ensure that this data matches the household mains supply.

Connection of this appliance should be made via a suitable isolator or a double pole fused spur connection unit which complies with national and local safety regulations and the On-Off switch should be easily accessible after the appliance has been built in.
When switched off there must be an all-pole contact gap of 3 mm in the switch (including switch, fuses and relays according to EN 60335).

If the switch is not accessible after installation (depending on country), an additional means of disconnection must be provided for all poles.

For extra safety it is advisable to protect the appliance with a suitable residual current device (RCD). Contact a qualified electrician for advice.

Important

This appliance is supplied for connection to an a.c. 230 V single phase 50 Hz supply.

The wires in the mains lead are coloured in accordance with the following code:

Green/yellow	= earth
Blue	= neutral
Brown	= live

WARNING:
THIS APPLIANCE MUST BE EARTHED

The Miele DSM 400 control module can be used to combine the cooker hood with other components.

It enables the following:

Potential free connection

This can be used to operate a further appliance via the On/Off button ① on the cooker hood.

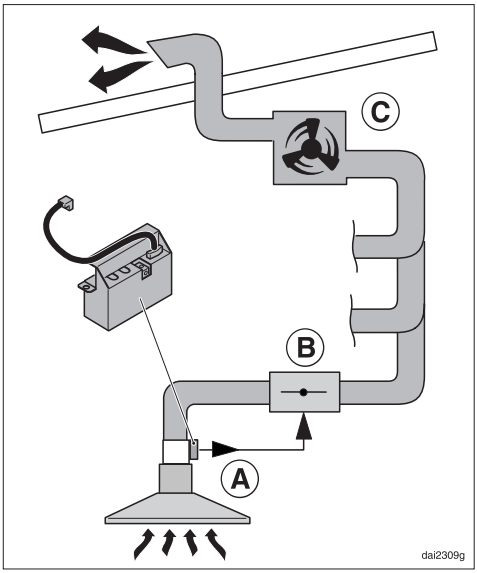

The potential free contact on the DSM 400 Ⓐ can, for example, be used in a cooker hood with an external motor ...EXT, which is connected to a central ducting system.
The contact can then be used to operate an electrically driven non-return flap Ⓑ which is connected to the central extraction unit Ⓒ.

Components used in the central ducting system are not supplied by Miele.

If in any doubt, the advice of a competent builder or, for gas, a Gas Safe installer must be sought.

Connection to a light switch

The control module can be used to switch on the cooker hood lighting and also to dim it, via a pushbutton light switch in the house.

Installation

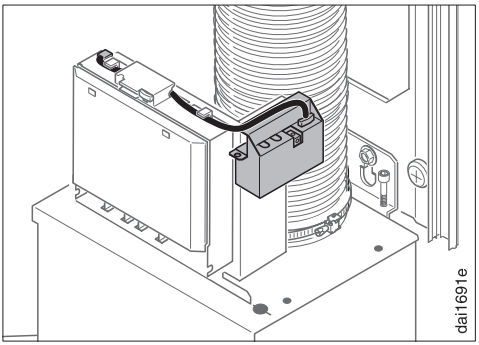

The tower needs to be removed before the control module can be fitted to the fan unit.

The electrical connection of components to the control module must be carried out by a suitably qualified and competent person.

Technical data

Total connected load* . . . . . 260 W
- Fan motor* . . . . . 200 W
- Hob lighting . . . . . 3 x 20 W

Voltage . . . . . AC 230 V

Frequency . . . . . 50 Hz

Fuse rating . . . . . 5 A

Electrical cable length . . . . . 1.5 m

Weight
DA 5690 W . . . . . 28 kg
DA 5690 W EXT . . . . . 25 kg

Fan performance*

Extraction power according to EN 61591

Extraction system ∅ 150 mm:
Level 1 . . . . . 200 m^3/h
Level 2 . . . . . 300 m^3/h
Level 3 . . . . . 400 m^3/h
IS (Intensive setting) . . . . . 640 m^3/h

Extraction system ∅ 125 mm:
Level 1 . . . . . 180 m^3/h
Level 2 . . . . . 280 m^3/h
Level 3 . . . . . 380 m^3/h
IS (Intensive setting) . . . . . 580 m^3/h

Recirculation with charcoal filter:

Level I . . . . . 150 m^3/h
Level 2 . . . . . 210 m^3/h
Level 3 . . . . . 330 m^3/h
IS (Intensive setting) . . . . . 490 m^3/h

Special accessory for recirculation mode:

– Conversion kit DUW 20

– Miele charcoal filter DKF 12-1

* For EXT models, the connected load and extraction power will depend on the type of external motor fitted.

...EXT models:
Length of connection cable to external motor . . . . . 1.9 m

United Kingdom
Miele Co. Ltd.
Fairacres, Marcham Road
Abingdon, Oxon, OX14 1TW
Tel: 0845 365 0555
Fax: 0845 365 0777
Customer Contact Centre Tel: 0845 365 6600
E-mail: info@miele.co.uk
Internet: www.miele.co.uk

Australia
Miele Australia Pty. Ltd.
ABN 96 005 635 398
1 Gilbert Park Drive, Knoxfield, VIC 3180
Tel: (03) 9764 7130, Fax: (03) 9764 7149
Internet: www.miele.com.au

China
Miele (Shanghai) Trading Ltd.
1-3 Floor, No. 82 Shi Men Yi Road
Jing' an District
200040 Shanghai, PRC
Tel: +86 21 6157 3500
Fax: +86 21 6157 3511
E-mail: mieleshanghai@cn.miele.com
Internet: www.miele.cn

Miele (Hong Kong) Limited
41/F - 4101, Manhattan Place
23 Wang Tai Road
Kowloon Bay
Hong Kong
Tel: (852) 2610 1331
Fax: (852) 2610 1013
Email: mielehk@miele.com.hk

India
Miele India Pvt. Ltd.
Ground Floor, Copia Corporate Suites
Plot No. 9, Jasola
New Delhi – 110025
Tel: 011-46 900 000, Fax: 011-46 900 001
E-mail: customercare@miele.in
Internet: www.miele.in

Manufacturer: Germany - Miele & Cie. KG
Carl-Miele-Straße 29, 33332 Gütersloh

Ireland
Miele Ireland Ltd.
2024 Bianconi Avenue
Citywest Business Campus, Dublin 24
Tel: (01) 461 07 10, Fax: (01) 461 07 97
E-Mail: info@miele.ie, Internet: www.miele.ie

New Zealand
Miele New Zealand Limited
Unit L, 10-20 Sylvia Park Road
Mt. Wellington, 1060, Auckland, NZ
Tel: 0800 264 353, Fax: 0800 463 453
Internet: www.miele.co.nz

Singapore
Miele Southeast Asia
Miele Pte. Ltd.
163 Penang Road
04 - 02/03 Winsland House II
Singapore 238463
Tel: +65 6735 1191, Fax: +65 6735 1161
E-Mail: infosea@miele.com.sg
Internet: www.miele.sg

South Africa
Miele (Pty) Ltd
63 Peter Place, Bryanston 2194
P.O. Box 69434, Bryanston 2021
Tel: +27 (0) 11 548-1900
Fax: +27 (0) 11 548-1935
E-mail: info@miele.co.za
Internet: www.miele.co.za

United Arab Emirates
Miele Appliances Ltd.
P.O. Box 11 47 82
Gold & Diamond Park
Sheikh Zayed Road
Building 6 / Offices Nos. 6-214 to 6-220
Dubai
Tel: +971-4-341 84 44
Fax: +971-4-341 88 52
E-Mail: info@miele.ae
Internet: www.miele.ae

Alteration rights reserved / 3011

M.-Nr. 09 204 070 / 00

CE